




## Installation guide

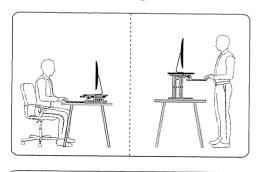

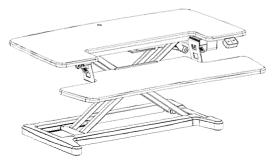

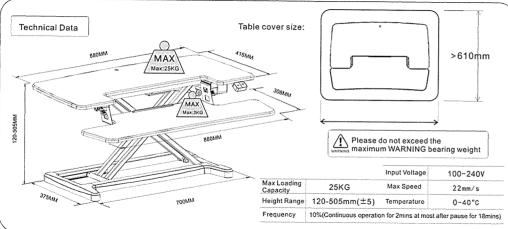

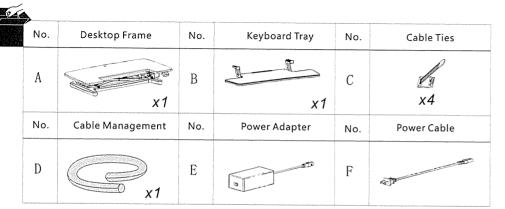


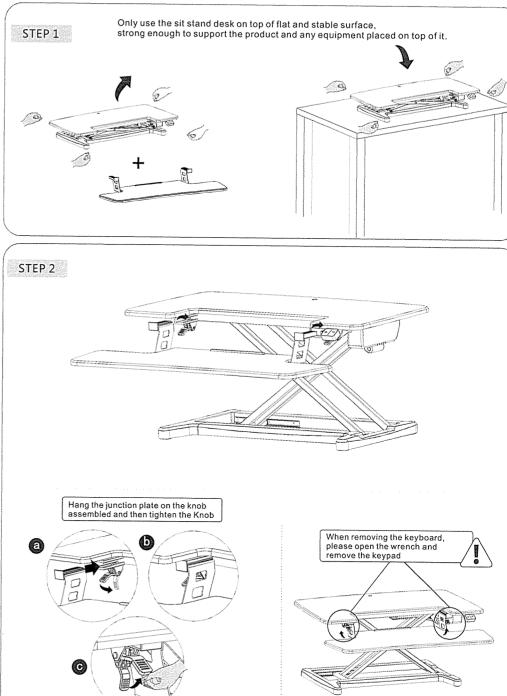









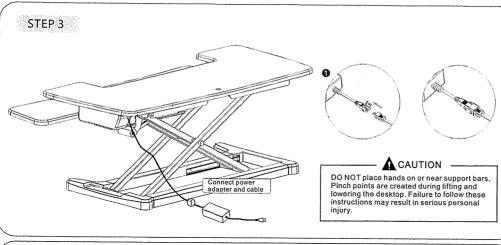

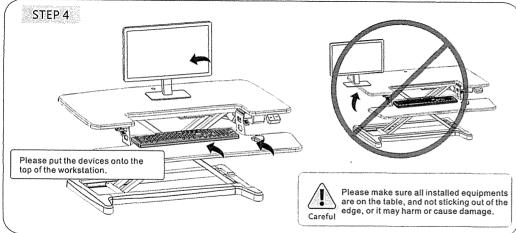

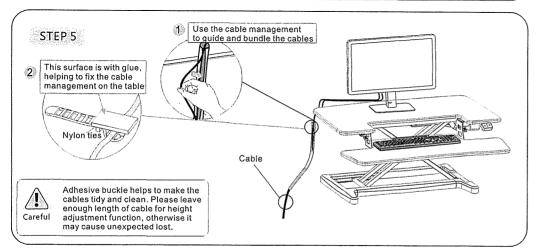

## How to use handswitch

Common fault treatment

those fault and error

with power supply

Faull Phenomenon

Downward eliding

Overwork

(Duty cycle: Max 2min on / 18min off)

Adjust the desk upwards Adjust the desk downwards

The following tips will help you detected and eliminate the common fault and error.

Method

2. Contact your supplier or dealer

Contact your supplier or dealer

1.Restart after suspend for 30mins

2.Contact your supplier or dealer

1.Check if overloaded, Max loading :25kg

If the fault you met is not listed below, please contact with your supplier. Only the

No response while long pressing 1. Check if all the cables be connected well down/up button after connected

manufacturer and professionals are capable for investigating and correcting



Uowards

Attention

- 1 Power supply: ACSON/-240V ENCOUR
- 2. Service Environment: 0-40°C
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet disholath
- when cleaning, be careful not to let the drops into the internal parts, not loose the connector,

  4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household
- 5. Check carefully to ensure correct and complete assembly before using.
- Be familiar with all functions and program settings of the product before first use
- Children are forbidden to play on the product because of unforeseen action when playing. so any dangerous consequences caused by this improper action will not be on Slight noise caused by the V-ribbed belt or brake system due to structure will not have any
  effect on the use of the equipment.
- 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not politife the environment.

  10. This appliance can be used by children aged from 8 years and above and persons with
- 10. This appraisation was used by credited agout from a years and above and persons with reduced physical, sensory or mental capabitities or tack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 11. Cleaning and user maintenance shall not be made by children without supervision.
- 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard
- 13. Please make sure there is no hazard sources in your operating environment, e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic ban may lead to choking hazard to children

14. Keep the original package of the equipment if necessary in case of the future use in

## Waste disposal





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.





Please first adjust it to the highest, then remove equipment to avoid harm or damage,





Please move it by two persons, or parts may collide and cause damage.