

Assembly Instructions MODEL NO: Screw 8×16 48PCS Screw 5×20 2 60+4PCS M6 1PCS STEP1 STEP2 0 0 1200W=1140 A(T187) 1500W=1440 1800W=1740 K 2PCS 1200W=1110 1500W=1410 N=4PCS M=2PCS 1800W=1710 STEP3 STEP4

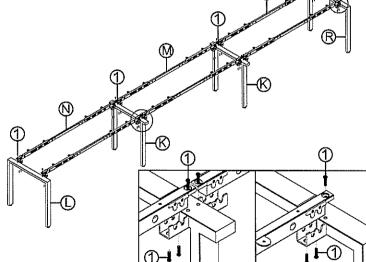

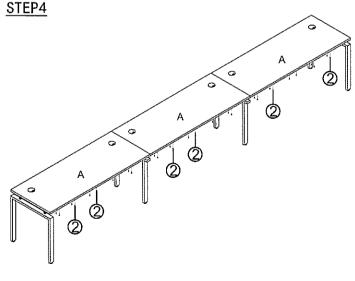

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

