











ASSEMBLY INSTRUCTIONS  
TFR900

	12*16H 2pcs		M8*12H 2pcs
	Ø12*2H 2pcs		Ø8*2H 2pcs
	M8*20H 5pcs		M5 1pcs
	M12 1pcs		Ø16 1pcs

1

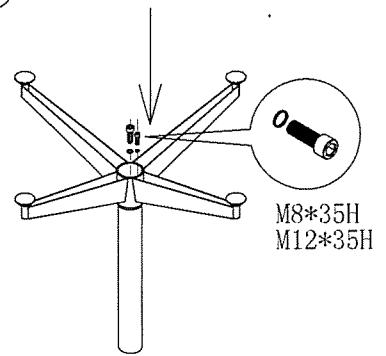

2

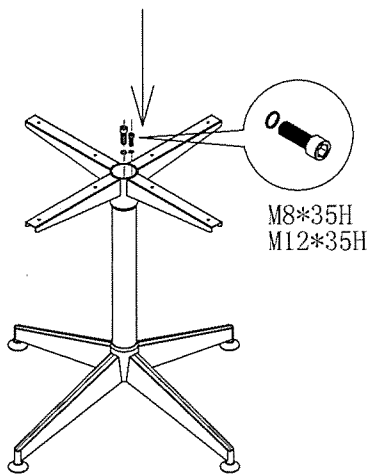

2

